



Candlelight

An innovative topcoat designed to emulate the radiant glow and subtle nuances of flickering candlelight. This unique product adds drama and quiet sophistication to any Ralph Lauren painted wall.

ABOVE, BASE COLOR: ICELANDIC POPPY • VM37

RLHOME.POLO.COM

Discover paint how-to videos and explore Ralph Lauren exceptional quality latex paint online in our entire spectrum of colors or call **1-800-379-POLO** for information.

Visit our comprehensive in-store color display and obtain paint chips for accurate color & finish.

Candlelight™ Topcoat

RALPH LAUREN PAINT NEEDED:



RALPH LAUREN
CANDLELIGHT TOPCOAT

RALPH LAUREN APPLICATORS NEEDED:



9" RALPH LAUREN
CANDLELIGHT ROLLER
Handle sold separately



4.5" RALPH LAUREN
CANDLELIGHT ROLLER

ADDITIONAL ITEMS NEEDED:

PAINTER'S MASKING TAPE

Candlelight topcoat is applied over a basecoat color using a random rolling technique. For a consistent appearance throughout your room, it is recommended that one person applies the Candlelight to all walls.

BASECOATS

Apply Candlelight over your current wall color or a new wall color. For best results, Ralph Lauren Paint in an Eggshell or Satin sheen is recommended as a base color. Be sure surfaces are properly prepared. If applying a new wall color, wait 24 hours for the new paint to dry before applying Candlelight. *Helpful hint:* When Candlelight is applied over a flat sheen wall color, color may slightly deepen.

TAPING: Tape around the ceiling and trim work before applying Candlelight.

TOPCOAT PREPARATION TIME: 15 minutes per wall.


TOPCOAT APPLICATION TIME: Approximately 30 minutes to apply the Candlelight topcoat to a typical 8-ft x 10-ft wall.

TOPCOAT DRY TIME: Dries to touch in 30 minutes. Allow 24 hours for the Candlelight topcoat to be completely dry.


APPLYING THE CANDLELIGHT TOPCOAT

Pour Candlelight into roller pan. Fully saturate the Candlelight rollers, allowing them to become heavily coated with Candlelight. *Helpful hint:* Saturate both the 4.5"


trim roller and the 9" roller at the same time.

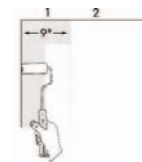

Beginning in a top corner of your wall, use the 4.5" trim roller to cut in an area approximately 9" wide and the full height of your wall.

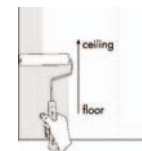


After the area is cut in, use the 9" roller to apply Candlelight in a single strip from floor to ceiling, blending the areas previously trimmed. You will need to reload the 9" roller two times so that a sufficient amount of Candlelight is applied to your wall.

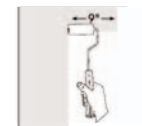

Repeat in a second column, again cutting in with your 4.5" roller near the ceiling and the baseboard, in a 9" wide section.



Blend sections by vertically rolling over the seam without reloading the roller.

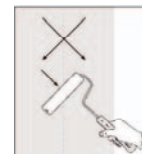

Gently apply X's across the two columns without reloading the 9" roller. *Helpful hint:* Lift the roller after each angled stroke.

Continue by making another 9" column and blending into the previous 9" column using the same technique as above. Repeat until entire wall is complete. *Helpful hint:* Cut in with the 4.5" trim roller as you proceed. Do not cut in the entire wall length and then return to fill in space.

